


## EARTH LEAKAGE CIRCUIT BREAKERS

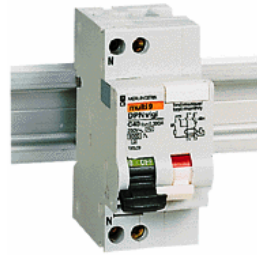

### DESCRIPTION

RCCB D.P	25, 40 AMPS	( 30 mA OR 300 mA SENSITIVITY )
RCCB F.P	40 AMPS	( 30 mA SENSITIVITY )
RCCB F.P	40 AMPS	( 300 mA SENSITIVITY )
RCCB F.P	63 AMPS	( 30 mA SENSITIVITY )
RCCB F.P	63 AMPS	( 300 mA SENSITIVITY )
RCCB F.P	80 AMPS	( 300 mA SENSITIVITY )
RCCB F.P	100 AMPS	( 300 mA SENSITIVITY )

## EARTH LEAKAGE RELAYS FOR USE WITH MCCB & ACB

RH99M WITHOUT TOROID ( SENSITIVITY : 3 - 30 MA ADJUSTABLE )

50 mm DIA TOROID

80 mm DIA TOROID

120 mm DIA TOROID : MA-120

200 mm DIA TOROID : SA-200